

Hang Up Installation Introduction

(Sample Mode: Indoor Aluminum Rental Cabinet)

1. LED Cabinet Drawing




Rear View

2. Cabinet Connection(Hung up style):

Step 1: Fast Locker to lock cabinet together.

Step 2: Use screw and iron square connector to fix cabinets.

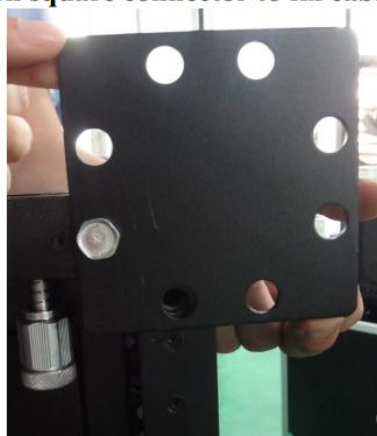

Step 3: Plug cabinet top fast locker into hanging bar and lock well, then use screw and black square connector to fix hanging bar on the top of led cabinets.



Reference Picture:



All Cabinets Combine Together

